


Model 230 Fine Grinder Grease Wells

Fill both wells (they are for separate bearing faces) with number 2 general purpose grease to the top.

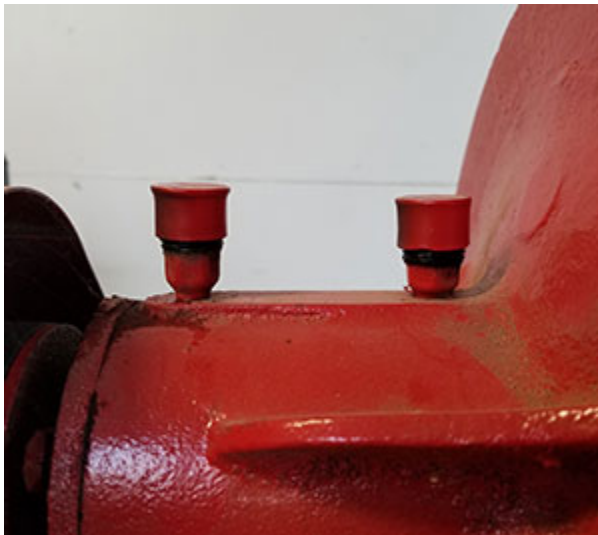

Every 8 hours give the caps a quarter turn. Monitor grease levels over time. Add grease as needed.



Get the caps started, but do not tighten all the way down. There should be enough grease added to not allow this. Over time, when the grease caps are tight, add more grease to the wells and repeat the cycle.